

Make: Ford
Model: Taurus
Year: 1997
 This Database Was Last Updated On: 2/9/2005
 Index #: 8349

Alarm		
Constant 12 volts	L GREEN/PURPLE (2) &	YELLOW (2) IGNITION SWITCH HARNESS
Ignition 12 volts	RED/L GREEN	IGNITION SWITCH HARNESS
Starter	RED/L BLUE	IGNITION SWITCH HARNESS
Dome Light	BLACK/L BLUE (+)	AT COURTESY LIGHT UNDER DASH *
Trunk Pin Switch	BLACK/PINK (-)	AT LIGHT IN TRUNK
Parking Lamp	BROWN (+)	AT HEADLIGHT SWITCH **
Power Lock	PINK/YELLOW	EITHER KICK #201
Power Unlock	PINK/L GREEN	PANEL

* BLACK/L BLUE (+) Dome Light Wire Also Located At Instrument Panel Fuse Block. ** BROWN (+) Parking Light Wire Also Located At Instrument Panel Fuse Block. #201- See Negative Pulse Door Lock Diagram.

Accessories		
Window Up	D\ WHT/BLK P\ WHT/YEL D\ YEL/BLU P\ YEL/BLK @ MAIN #211	
Window Down	F/ ORG/WHT F/ TAN/BLU R/ GRY/ORG R/ RED/BLK SWITCH	
Ign Key Warn	BLACK/PINK (-)	GRAY 4 PIN CONN. ON STEERING COLUMN
Trunk Release	GRAY/RED (+)	AT TRUNK RELEASE SWITCH * #231
OEM Horn	D BLUE (-)	STEERING COLUMN HARNESS
Headlights	RED/YELLOW (+)	AT HEADLIGHT SWITCH
OEM Alarm Arm	PINK/L BLUE (-)	DRIVER KICK
OEM Alarm Disarm	PINK/WHITE (-)	PANEL

#211- See Reversal Rest At Ground Power Window Circuit Diagram. * With OEM Keyless Entry, Trunk Release Wire Is PINK/ORANGE (-) At OEM Keyless Entry Module Or PINK/YELLOW (-) At Trunk Release Switch. #231- See Positive Pulse Trunk Release Diagram.

Remote Start		
Tach Signal	TAN/YELLOW	AT POWERTRAIN CONTROL MODULE * #236
Ignition #2	GRAY/YELLOW	IGNITION SWITCH HARNESS (BLOWER) **
Ignition #3	RED/L BLUE	IGNITION SWITCH HARNESS (HEAT/AC) ***
Accessory	BLACK/L GREEN	IGNITION SWITCH HARNESS
Neutral Safety	NOT GROUNDING TYPE -	OEM SWITCH OPENS STARTER CIRCUIT
Brake Light	RED/L GREEN (+)	AT SWITCH ABOVE BRAKE PEDAL
Reverse Light	BLACK/PINK (+)	BLACK 42 PIN CONN. BEHIND DRIVER DASH
Rear Window Defrost	D BLUE/ORANGE (-)	AT REAR WINDOW DEFOGGER SWITCH

* Powertrain Control Module Located In Engine Compartment On Passenger Firewall. ** If Radio Shuts Off Upon Shifting, Relay Isolate Starter Wire Of Remote Start. *** In Some Vehicles, Ignition #3 Wire Has Been Found As RED/BLACK. #236 - See Ford Passive Anti Theft Security Diagram.

InterConnect Harnesses			
Function	Part#	Avail	Location
StrInt,+12,Gnd,Ign	2270	yes	AT IGNITION SWITCH ON STEERING COLUMN
Horn Honk		no	
Lock & Unlock	2362	yes	GRAY 4 PIN ROUND CONNECTOR *
Light Flash		no	
Dome Light		no	
Trunk Switch		no	
AL-100 / VIP-4000		no	
Remote Start		no	

* This Connector Is Located At The Edge Of The Door Boot As It Enters The Door high In The Passenger Kick Panel.

AL 100 / ULTIMATE		
RKE Module	BEHIND DRIVER DASH TO RIGHT OF STEERING COLUMN	
Motor Lock	PINK/BLACK	EITHER KICK PANEL OR AT RELAYS *
Motor Unlock	PINK/ORANGE	BLACK 26 PIN CONN. AT FUSE BLOCK *
Drv Door Unlock	RED/WHITE	BLACK 26 PIN CONN. AT FUSE BLOCK *
OEM Relays	SEE NOTES BELOW **	
Addon Security Type	#5 CONNECTION #225	

* Circuit Type - Reversal Rest At Ground. ** All Door Lock & Unlock Relays Are Located At Relay Center Behind Driver Dash To Right Of Steering Column. Driver Door Unlock Relay Is Located At Instrument Panel Fuse Block. #225 - See AI-100 / VIP-4000 Type #5 Diagram.

Tech Notes					
Driver		Passenger		Size	Location
ORANGE/L GREEN	(+)	WHITE/L GREEN	Front		
L BLUE/WHITE	(-)	D GREEN/ORANGE			
GRAY/L BLUE	(+)	ORANGE/RED	Rear		
TAN/YELLOW	(-)	BROWN/PINK			